



## **Remote Transmitter Programming for Gen II Receivers**

**ALL REMOTES MUST BE PROGRAMMED AT THE SAME TIME.**

**Start by removing power from the unit. This can be accomplished by either unscrewing and pulling the “POWER” cable from the box or unplugging the AC from the extension cord or unplugging the DC from the pigtail.**

**With the power disconnected, press any button on the remote transmitter while restoring power. The motors will “jog” indicating the remote has been programmed. If you have additional transmitters, simply press any button on the next one within 5 seconds of the first one. Continue this process until all transmitters have been programmed. You will receive a motor “jog” acknowledgement from each transmitter. After the last transmitter is programmed, wait 5 seconds and your system will be ready.**