


To program the remote transmitters

12v and 120v Units (2 or 3 button remote)

Remove the cover or the control box.

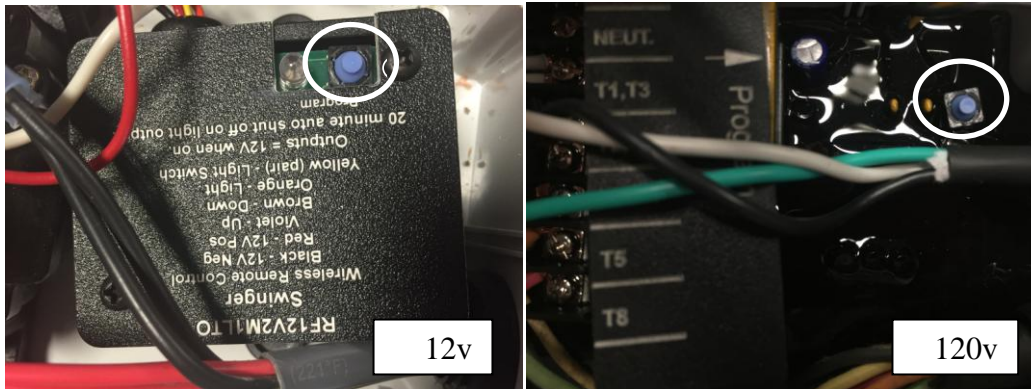

With power on push and hold the small blue “program” button until the red light comes on. On your remote, press and release any button; The red light will blink once. If you have multiple remotes, move to the next one, press a button, the red light will blink twice, continue will all remotes. Once all remotes have been programmed, the red light will go out after 5 seconds. Your remote transmitters are ready for use.

12v Units (4 button remote)

Remove the cover or the control box.

With power on push and hold the small white “program” button until the red light comes on.

Then push and release any button on a remote.

Wait for the red light to go off.

Repeat previous 2 steps for all remotes.

